



M8 x 65 coach bolts to fix top to support brackets. Drill tops to match position of brackets.

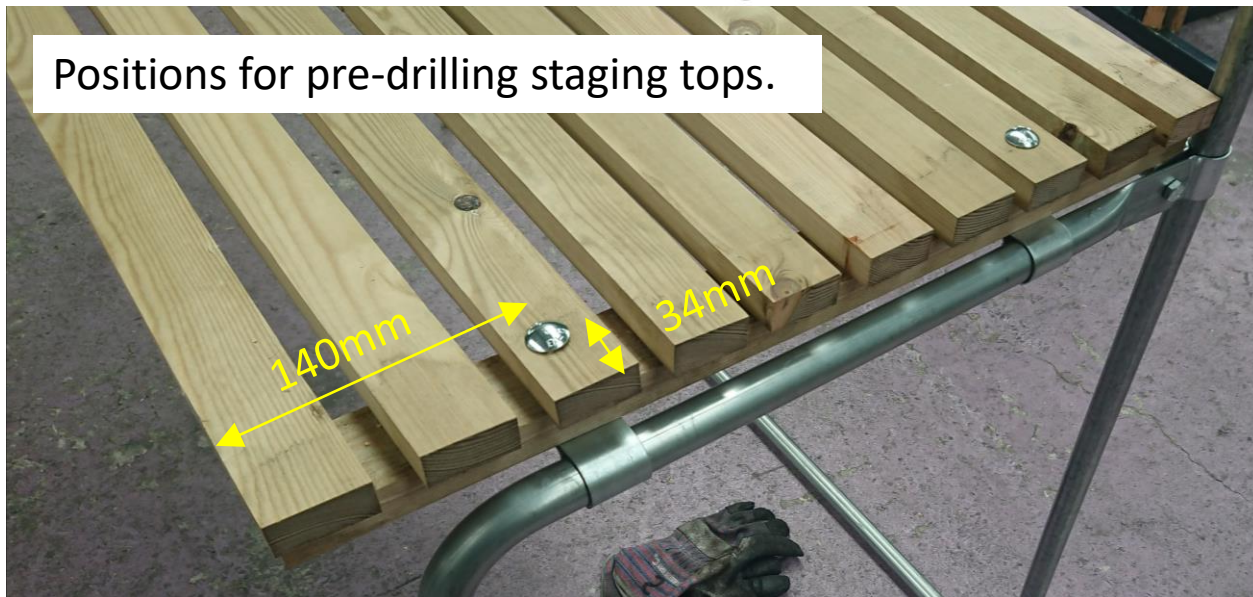

Positions for pre-drilling staging tops.



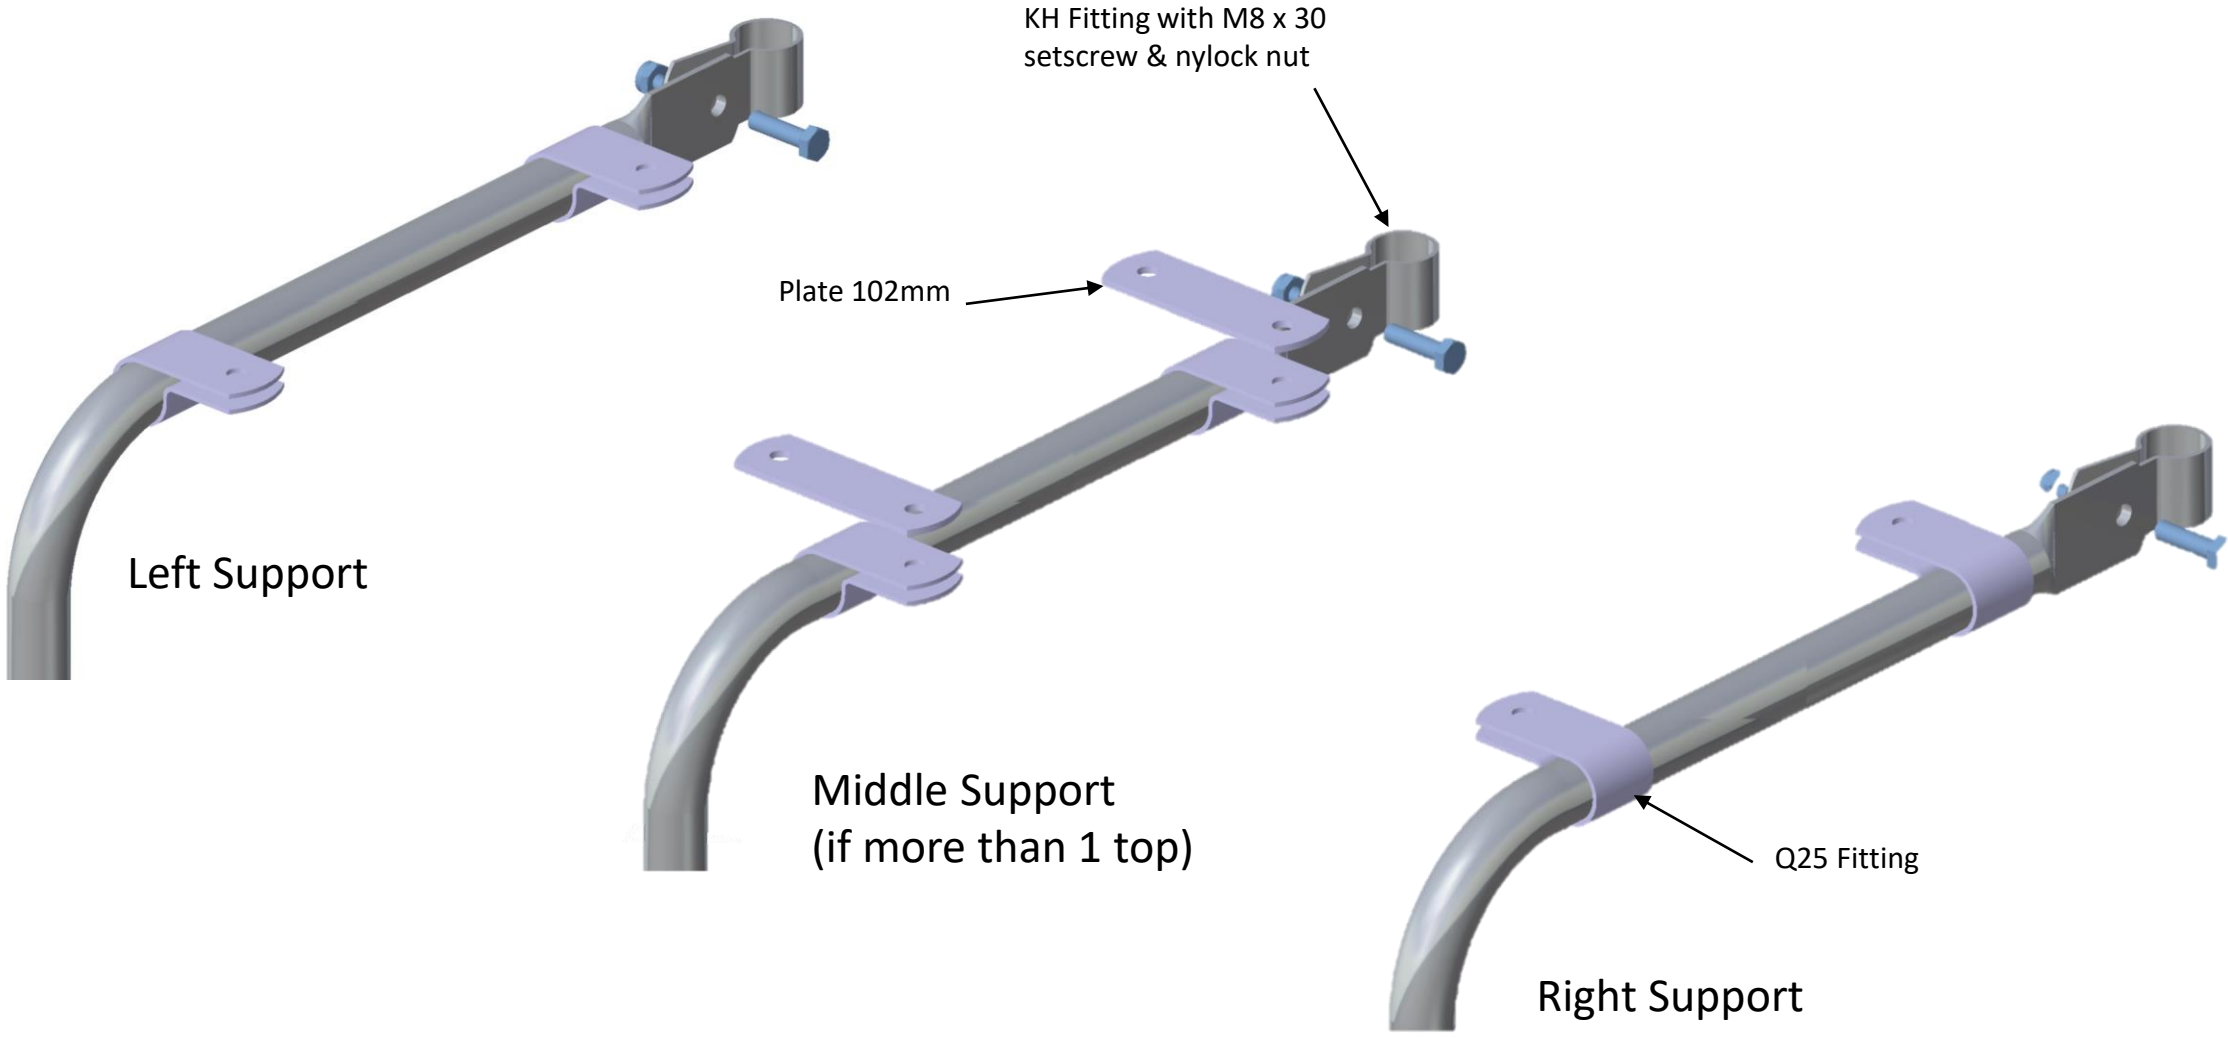

KH Fitting with M8 x 30 setscrew & nylock nut

Plate 102mm

Left Support

Middle Support
(if more than 1 top)

Q25 Fitting

Right Support